


**BC58****21** GA

TOOL SPECIFICATIONS

Trigger	Contact
Op. Pressure	60-95 psi (4.1 - 6.5 bar)
Air Consumption (60 CPM)	.77 scfm
Air Inlet	1/4" NPT
Weight	4.1 lbs (2 kg)
Height	8.5" (216 mm)
Length	12.5" (317 mm)
Width	3.5" (89 mm)
Main body material	Aluminum



FASTENER SPECIFICATIONS

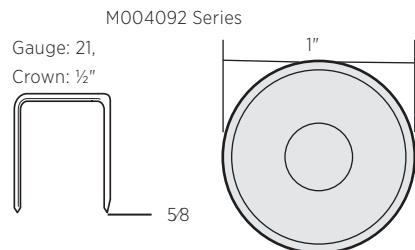

Capacity	110
Range	5/8" staple 1" cap
Crown/Gauge	1/2"/21 ga.
Collation	Glued strip
Series	M004092

1/2" Crown, 5/8" Staple & 1" Cap Stapler

ITEM #4A0001N

Save time and money when installing felt paper and house wrap. The ultra-lightweight, balanced BC56 cap stapler drives 21 gauge 1/2" crown, 5/8" staples with plastic caps in tandem via an easy load system.

APPLICATIONS

- House Wrap & Roofing Felt Installation

FEATURES AND BENEFITS

- EZ-Load system for staples and caps
- Ultra-lightweight for ease of use and maneuverability
- Balanced and fast for high production
- Side mount cap collator - holds caps regardless of tool position

INCLUDES

- 5 year limited warranty
- Case, wrenches, oil, plug

BC58

1/2" Crown, 5/8" Staple & 1" Cap Stapler

ITEM #4A0001N



360° Exhaust
no tool required.

Lightweight
just 4.1 lbs.

Steamlined Casting
protects external parts.

Improved Guidebody
for better performance.

Side Mount Cap Collator
holds caps regardless of tool position.

Stretch Comfort Grip
for comfort and control.

Includes 1/4" Male Coupler
with cover to keep tool clean.

EZ-Load System
for caps and staples

Belt Hook
lets the tool go where you go.



Choose the right actuation mode

Sequential Actuation (also known as restrictive trigger or trigger fire) operates in the following a sequence - depress the safety element at the nose of tool against the work surface then pull the trigger. After each fastener is driven, release the trigger and lift the tool off the work surface before starting the sequence again. This trigger is recommended and acceptable for most applications.

Contact Actuation (also known as dual action, bounce or bottom fire) operates in the following sequence- pull the trigger first and keep the trigger pulled while moving the tool along the work surface with a bouncing motion, depressing the safety element at the nose of the tool against the work surface where the fastener is to be driven. This trigger is recommended for use by trained professionals only in high production or volume applications.

Always read the Operators Manual and Safety Instructions with all tool to ensure proper use and safety precautions. For additional information on SENCO fastening systems and how SENCO will save you time, reduce costs and increase quality, call our toll-free Action Line: 800-543-4596, or visit our website at: senco.com