

CARDINAL® SAFETY CUTTERS

Replacing the 4-blade cartridge



Switch




DO NOT PRY UP ON DOOR TAB. Lifting may result in breaking the tab.



Grab top of door and pull away from blade to release the door using its pivot point.



Rotate the door fully open to reveal the cartridge.

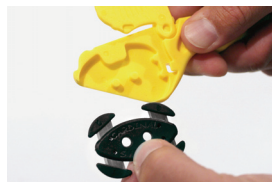

Remove cartridge and rotate to next unused blade (#1-#4). Replace cartridge if all are used.



Press firmly into place and close. If a new cartridge, insert with blade #1 exposed.

Scan with phone to watch video on Switch web page



Switch Mini



Locate tab on door.



Depress door tab while using groove on side of door to open.



Open the door fully at the hinge point to reveal the cartridge.



Remove cartridge and rotate to next unused blade (#1-#4). Replace cartridge if all are used.



Press firmly into place and close. If a new cartridge, insert with blade #1 exposed.